


my first bubbles

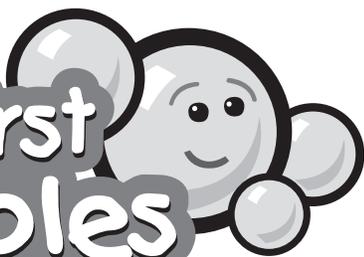

Bubble Maker Instructions

The My First Bubbles™ Bubble Maker is an interactive toy that teaches toddlers cause & effect learning! Making bubbles is now as easy as 1-2-3! 1: Toddlers pull down the handle for a burst of bubbles, 2: Return the handle to upright position and 3: Pull down again for another burst of bubbles!

Installing the batteries:

Battery installation should be done by an adult.

1. Loosen battery door screw with a Phillips head screwdriver.
2. Remove battery door and place 2 "AA" batteries as indicated in the battery compartment.
3. Replace battery door cover and tighten screw. Do not overtighten.

How to fill with Bubble Solution:

1. Locate the spout on the toy and unscrew cap. (Illustration 1)
2. Unscrew Easy Fill nozzle & remove foil from bubble solution bottle. Reattach Easy Fill nozzle.
3. Insert nozzle into spout & squeeze bottle gently.
Note: You can check bubble solution level by looking at the fill window located next to the spout. **Do not overfill.** (Illustration 2)
4. Reattach cap to the spout.

How to Make Bubbles:

1. Pull down the chunky handle and the Bubble Maker will blow a **Burst** of bubbles. (Illustration 3)
2. When bubbles stop blowing, return handle to the upright position. (The bubble wand will reload with solution.)
3. Repeat step 1 & 2.

Trouble Shooting:

If toy does not blow bubbles:

1. Check to make sure you have installed new, fresh "AA" batteries.
2. Pull down the handle repeatedly until bubbles begin to blow. (This will lubricate parts and "prime" bubble wand with solution.)
3. Empty the bubble solution out through spout. We recommend waiting 1 day before pouring new, fresh bubble solution into bubble tank. **DO NOT** reuse discarded bubble solution.

Special Notes:

1. Always empty bubble solution by pouring it out through the spout. **DO NOT** empty toy by turning it upside down and emptying it from the top of the toy.
2. Be careful if toy is turned upside down when full, bubble solution may leak out of the toy. This will not harm the toy. Just wipe off excess bubble solution.
3. Occasionally, bubble solution may collect in the catch pan located on the bottom of the product. Simply, unscrew catch pan, empty any excess bubble solution, and reattach catch pan.
4. If toy will not be used for long periods of time, empty bubble solution and remove batteries.

This toy works best with any premium brand bubble solution.

Questions? Comments? Please call us at 1-800-LIL-KIDS

Monday - Friday 9 AM - 4:30 PM EST or visit us on the web at www.littlekidsinc.com

©2007 Little Kids, Inc., 225 Chapman Street/Suite 202/Providence, RI 02905. All Rights Reserved.

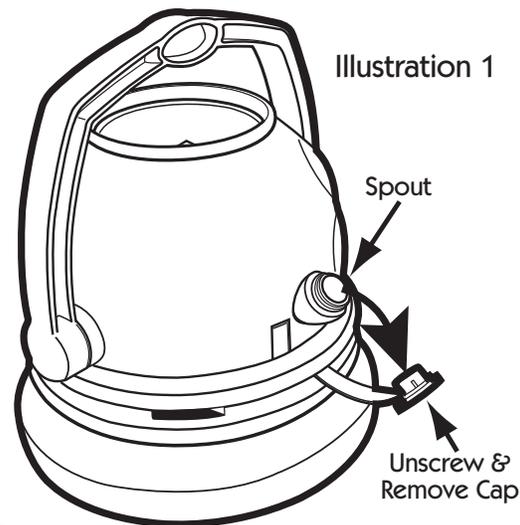


Illustration 1

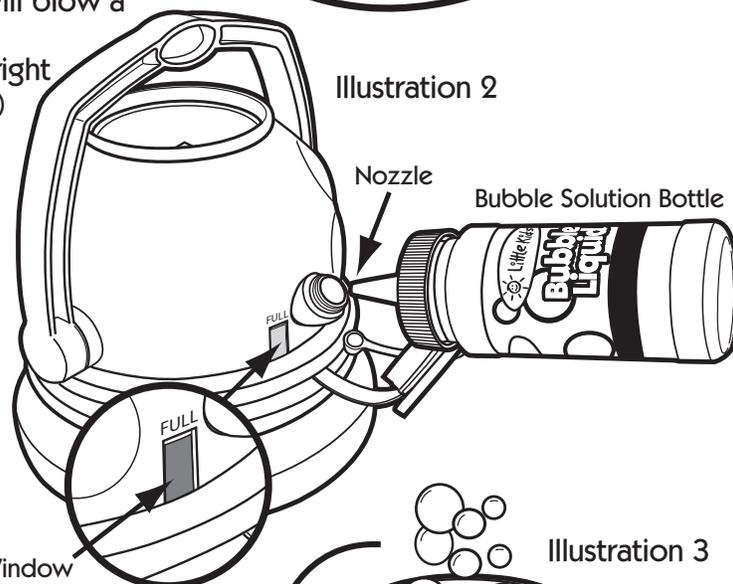


Illustration 2

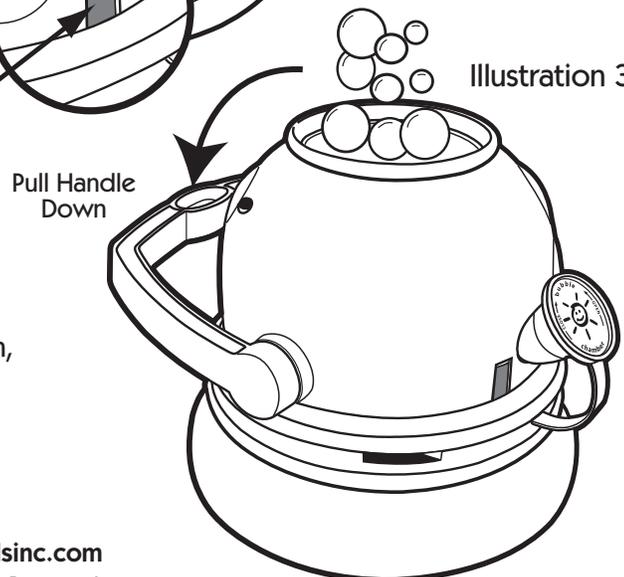


Illustration 3