



Notes to Parents:

- Install batteries prior to filling with bubble solution. See bottom of box for battery installation instructions.
- For best results, use premium brand batteries.
- Remove foil from solution bottle and discard.
- Slowly pour solution into front raised spout on the right side front face of bubble machine. Do not overfill above spill hole on the left side of front face.
- Press top activation button to turn on.
- Allow bubble machine at least 45 seconds to get bubbles blowing from bubble wands as they rotate.
- Do not pull on bubble wands.
- Do not place fingers or objects inside rear fan grill opening.
- · Avoid putting fingers inside moving wands when machine is activated.
- Do not immerse toy in water.
- · Turn off machine when not in use.
- To empty solution from reservoir, tilt forward to pour out of spout. Do not allow solution to flow into slots behind bubble wands.
- · Wipe with cloth to clean.
- · Adult supervision recommended.

Important Battery Warnings:

- Use only fresh "AA" (1.5v) batteries.
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the unit before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the unit.
- The supply terminals are not to be short-circuited.
- Check that all contact surfaces are clean and bright before installing batteries.
- Remove batteries if the toy is not used for a long period of time.
- Do not immerse toy in water.
- Dispose of batteries safely.

Installing the Batteries:

- Battery installation should be done by an adult.
- Loosen screw of battery door with a Phillips head screwdriver.
- Remove battery door and place 4 "AA" (1.5v) batteries as indicated in the battery compartment.
- Replace battery door cover and tighten screw. Do not overtighten.
- · See important battery warnings.



Questions? Comments? Please call us at 1-800-545-5437 or write us at the address above. Please include the UPC code for reference. Product styles and colors may vary. Please recycle where facilities exist.

Do not drink bubble solution. Avoid contact with eyes.

If contact occurs rinse immediately with water.

© 2018 Little Kids, Inc. 1015 Newman Avenue, Seekonk, MA 02771 All Rights Reserved. Made in China.

