

# Sesame Street

## Giggle & Bubble Elmo

**Elmo talks,  
counts & sings!**

### Instructions:

- Remove foil seal from bubble bottle and discard. Do not discard cap. Bottle is refillable for repeat play.
- Align bubble bottle with the recess in the bottom of the bubble machine.
- Place the two tubes from the bubble machine into the top of the bubble bottle. (Note: Please make sure the tubes are straight so bubble solution can go into them. If the tubes bent during shipping, please straighten out. Do not pull on the tubes.)
- Twist the bubble bottle into place until secure. Do not overtighten.

### Tips and Tricks:

- When the machine is turned on, allow 45 seconds for bubbles to start coming out of the top.
- Flush out machine tubes with warm water after every use by placing the tubes into warm water and turning the machine on.
- Do not immerse the bubble machine in water.
- Refill bubble bottle with additional Fubbles® Bubble solution when empty.

**Elmo  
says over  
15  
phrases!**

**Requires 3 AA batteries, 1.5v (not included)**

### Installing the Batteries:

- Battery installation should be done by an adult.
- Loosen screw of battery door with a Phillips head screwdriver.
- Remove battery door and place 3 "AA" (1.5v) batteries as indicated in the battery compartment.
- Replace battery door cover and tighten screw. Do not over tighten.
- See important battery warnings.

### Important Battery Warnings:

- Use only fresh "AA" (1.5v) batteries
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Non rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the unit before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the unit.
- The supply terminals are not to be short-circuited.
- Check that all contact surfaces are clean and bright before installing batteries.
- Remove batteries if the toy is not used for a long period of time.
- Do not immerse toy in water.



Sesame Street® and associated characters, trademarks and design elements are owned and licensed by Sesame Workshop.

© 2018 Sesame Workshop.  
All rights reserved. / Tous droits réservés.

© 2018 Little Kids, Inc.  
1015 Newman Avenue, Seekonk, MA 02771  
1-800-545-5437

All Rights Reserved.  
Made in China.

**2+**  
years

